 





1 Art.3311 - 3411

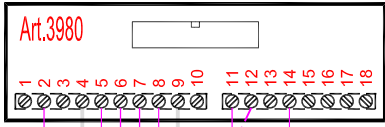

Videophone's jumpers settings
Impostazioni jumpers videocitofoni

3311 - 3411 - 3511
Signals

1	+12
2	TV1
3	TV2
4	1
5	2
6	3
7	4
8	5
9	6
10	7
11	V
12	M
13	R
14	C
15	-
16	T
17	1T
18	2T

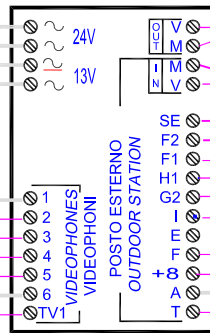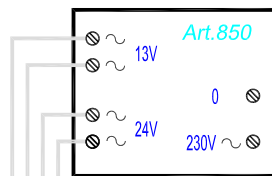


Art.890

RELEASE



VM000001

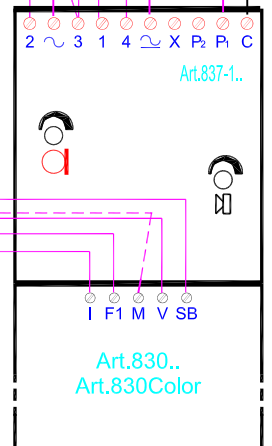

Art.830..
Art.830Color

