

WI-FI DOOR STATION





www.espuk.com

APWIFIDS-BLK Manual.indd 1



System Overview Optional accessories: Sunshield 10000000000 **FVBPSBB** Lock power Camera lens supply IR LED EV-EXIT Speaker Push to release EV-EBG Call button Emergency release Microphone Kit contains: EV-ML-250/500XT Electro-magnetic lock = Reset pin tool = Wifi door station LAN terminal = 12vDC (500mA) power supply Wire connectors = 10DB Wifi Antenna ENTERD = Screws and rawl plugs = Micro SD card (pre-installed) Electric lock

۲

= Hex key

Connections

It is recommended the door station is programmed prior to installation.





Installation



Site the door station 1.5 meters from the ground, or to suit application.

Position camera in the direction of where a visitor will stand during operation.

Avoid areas of high sunlight and noise levels.



Surface mount the sunshield of the door station and connect the system cabling.

Mount the camera to the sunshield by fixing with the supplied hex screw.



All system connections are to be made inside the building, this includes the siting of the antenna.

()

Page 4

System set up

Please ensure the following;

- 1. The user's smart-phone is connected to the Wi-Fi network.
- 2. The Door Station is within the network's Wi-Fi range.
- 3. The network's key/password is available.

Whilst the door station is powered, the rear tamper switch will be active. Ensure the tamper switch is suppressed during setup.

If the tamper alert is activated the alarm will sound for 60 seconds, or bypassed by powering down for 10 seconds

()



Page 5

Step One:

Connect the Antenna and power supply to the door station. Apply power. The Micro SD card is pre-installed and is not accessible.





Step Two:

After 60 seconds of the power applied. The door station will sound a registration tone every 5 seconds.

۲



reset pin tool.

successful.

every 5 seconds.

Step Three:

Download the required APP by searching for ESP Aperta on the APP market.





Step Four:

Follow the on screen instructions to register an account;

1. Select 'Register'

2. Input email
 3. Create Password

(

4. Select ' Login'





Step Five:

Login to the APP

- 1. In the Device list select the '+' symbol
- 2. Select 'Add New Device' 3. Select 'Smartlink'





Step Six:

- 1. Enter Network Password and Select 'Next'
- 2. Ensure the Door station is sounding the registration tone and Select 'Hear a beep ...'
- 3. Follow the on screen instructions





Step Seven:

1. Hold smart phone close to door station and follow the prompts on screen

2. Enter a name for the door station and enter the default password 123

3. The door station will appear on the device list page



۲



Step Eight:

Review APP notification settings;

- 1. Select 'Settings' menu
- 2. Select 'Alarm Settings' menu
- 3. Ensure 'Receive Alarm Prompt' is enabled.





Step Nine:

Press the call button on the Door Station to test alerts



۲

()

If test is successful; retest Door Station in installation position before fixing.

Page 14

APP Operation

During a Connection



(



Adding a new user

Install the APP on the new user's smart phone and register an account;

1. Ensure smart phone is connected to the same Wi-Fi as door station.

2. Select the 'Discover New Devices' tab.



New device list				
A 479048	8 192.168.2	5.54 +		

()

3. Select the '+' on the

to be added.

ID number of the device

3. Enter a name for the door station and enter the default password 123.

4. Select 'Save'

<	Improve setting information Save
	ID U
0	test123
â	
-	





Set Time and Date

From the device list tap once and select Settings;

1.Select 'Settings'



2. Select 'Time Setting'

3. Adjust accordingly

< Settings		
Device ID		
Oevice information	>	
O Time settings	> >	
 Picture and sound 	>	
Security settings	>	
Network settings	>	
Alarm settings	>	
Record settings	>	
M Add sensor	>	
SS Firmware update It's already the late	st version	

۲





Record Set Up

Ensure that the time and date is set correctly

1. Select 'Settings'



2. Select 'Record Settings'

Device ID

O Device information

Picture and sound
 Security settings

Network settings

Record settings

55 Firmware update It's already the latest

۲

Alarm settings

Madd sensor

Time settings

Settings

3. Select 'Format SD card'





1. Select 'Settings'



- 2. Select 'Record Settings' 3. Select 'Record Alarm'



۲





Record Playback

From the Device list tap once and select 'Playback';





If recordings cannot be seen, please ensure the time and date has been set and the SD card formatted before re- attempting.



Notes on Best Performance

Network Connection

Wi-Fi devices rely on a strong and stable signal from the network. Performance and reliability of

Wi-Fi devices can become unpredictable if the signal strength is not sufficient for whatever the reason.

If Wi-Fi signal is a possible issue, one solution is the numerous Wi-Fi signal enhancing devices on the market to improve a network's performance.

Another solution is to use the LAN connection facility where applicable.

In addition, network connection for all devices (Wi-Fi or LAN) is limited by the bandwidth allowance of the network, ensure that the bandwidth is suitable for the number of devices which are being supported.

Please note; APWIFIDS requires the network to use 2.4GHZ Wi-Fi signal band.

APP Connection

(�)

Viewing from a mobile phone relies on a strong Wi-Fi signal or ensure a strong 3G or 4G signal is available.

For IOS it is recommended that the APP is left running in the background in order to benefit from the best performance.

For Android, the APP must be left running in the background to receive any service from the Door Station.

ESP are unable to guarantee that every device will be compatible with any ESP product and software supplied. Specific models of phone, tablet or other device, the hardware it contains, the service provider, the types of data services offered and specific phone / device plan will all affect the performance of PC / mobile device for remote viewing.

Page 21

Support Guide

Setup

If there are any issues encountered in the setup steps 1-9;

- = Check the correct APP has been installed
- Check the Door Station has sufficient power. Power OFF door station for 10 seconds and reapply power, then default the Door Station as instructed in Step 2, and re-attempt setup.

If issues persist; refer to the notes on best performance before re-attempting setup.

000000000000000000000000000000000000000	S	bec	ific	ation
---	---	-----	------	-------

Image sensor	1/4" colour CMOS Sensor
Compression	H. 264
Resolution	HD: 1280*720; SD: 640*360; LD 320*180
Memory	8GB Memory inside.
Lens	Fixed 2.1mm 110°/3.6mm 60°
Sensitivity	0Lux (IR ON) / 0.5Lux (normal)
IR LED	4 x Φ4
Night vision distance	Max. 2 meters
IR-CUT	Included
Wifi antenna	10DB
Size	L55 x W40 x H129mm
Power supply	DC 12V 500mA <12W
Max. current of relay's	<3A
Working Humidity	10% ~ 80% no condensation
IP level	IP65

()



۲

()



CE

Elite Security Products

Unit 7, Target Park, Shawbank Road, Lakeside, Redditch B98 8YN



Telephone: 01527 51 51 50 Fax: 01527 51 51 43 Email: info@espuk.com www.espuk.com

E&OE - Errors and omissions excepted.E17

